

E3821

IOView Wireless Document Camera







www IQBoard net Master@IQBoard.net

Attentions

- It is advised to use the provided power adapter in the package with this product.
- Do not leave it under direct sunlight or by heaters. It maybe discolored or damaged.
- Do not place this product by holding the base in both hands. Never hold the product by the arm or the camera head
- Use a soft, dry cloth for cleaning instead of any volatile solvent.
- When the device is not in use for a while, please turn off the power.
- Fold the arm when the product will not be used for long time.

During use:

- Please prevent children from operating the device without supervision.
- Recommended environmental conditions: Temperature: 0°C~40°C (32°F~104°F).
- Humidity: 30%~85% (No condensation).
- Do not turn or flip the camera head or arm to its limitation as below manual instructs.
- Do not point the camera lens directly at the sun. It may be damaged and fails to take
- Do not look directly to the LED lamps to prevent your eyes from being damaged.
- The product may not be operated properly if it is under charging.
- · Be careful to prevent the unit from dropping or overturning.
- Please prevent the camera head to hit the desk top or any other hard objects, it can be damaged easily
- Without Pedestal the device can fix to the table or other objects, make sure the handle screw tight.

Packing Lists

1. Document Camera



2. USB2.0 Cable



3. Power Adapter (Output: 5V 1A)



4. Sucker Antenna



5 Antenna



6. Wireless USB Dongle



7. Pedestal



8. CD (Software and Driver)



9. Certificate



10. Warranty Card




11. User Manual



Product Highlights

- 8.0 Mega pixels (3256*2448).
- 3 Level LED adjustable
- 10X digital zoom function.
- Frame rate ≥ 30fps under 720P/1080P with wireless connection.
- 2.4G wireless hotpot can support multi-device connected simultaneously.
- Supports capture any angle and shooting range up to A2 with its' hose design.
- The document camera can be clamped anywhere without pedestal.

Product Review

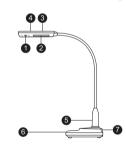

- (1) Camera lens
- (2) LED lights
- (3) Power button
- (4) LED light button
- (5) Handle & Screw
- (6) Pedestal
- (7) USB charging port

Product Connect

Document Camera Preparation

- (1) Assemble the pedestal.
- (2) Press the power button.

*Note: If the document camera has no power, please use the power adapter

(It takes 30~60 minutes to fully charge and can be used for 5~6 hours.)

Computer Preparation

- (1) Install wireless card driver in the CD, or download it from https://tendacn.com/en/product/support/U1.html
- (2) Connect the wireless USB dongle with antenna then plug it to the computer.
- (3) Click the Wi-Fi icon at the bottom right corner of the desktop to connect the available Wi-Fi.

(The SSID format of IQ wireless document camera will be like IQ-xxx and the default password is 12345678.)

- (4) Install IQ Wireless Document Camera Software in the computer and then open the image of document camera.
- *Note: If the computer has wireless card driver, please skip (1) and (2).

Trouble Shooting

Problems	Possible causes	Solutions
Computer could not detect hotspot of document camera.	Not enough power to support hotspot.	Charge for 30~60 minutes then check if the power indicator turns blue.
Software needs times to open and running slowly.	Need to use wireless USB dongle and high resolution will cause delay.	Connect computer with wireless USB dongle and change the resolution to 720P or 1080P.
The resolution only could set as 640*480.	Software installs error.	Please reinstall the software.
The images of document camera disappear while using.	Low battery power.	Charge for 30~60 minutes.